AIR PLATE ORIGIN HIGH OUTPUT Adjustable



Luminaire Details
Cut-out
Recess Depth
Clearance
Fixing Method
Max Ceiling Thickness
Min Ceiling Thickness
Max Driver Distance
Class
IP Rating
IP Zone
Material

Ø18mm 30mm Remote Driver 3x Screw Hole N/A

N/A N/A 20m III IP54 Zone 1 Aluminiu

Aluminium ADC12 2 Core 0.75mm²

300mm F Rated




How to Install

Cable type

Bezel Temp

Cable Length

- Cut hole in ceiling as per above cut-out;
- Fix the base of the fixture to the ceiling with the connecting cable threading through the centre hole.
- Wire luminaire cable to Orluna certified driver, ensuring correct polarity (red to positive terminal [+] and black to negative terminal [-]);
- With mains supply switched off, connect driver to mains supply (to avoid damaging the luminaire, do not hot-wire);
- Screw the main body of the Luminaire onto the fixed base

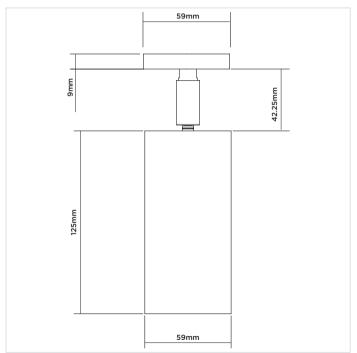

ORLUNA®

Installation Instructions